



Deluxe PA System

You are receiving this system in advance for your event. We encourage you to read through the operational instructions provided below, familiarize yourself and your staff and perform a test run prior to your event. An operational check was performed by our staff prior to your rental. Please keep unit out of extreme hot or cold. Unit must never be exposed to rain.

1. Mount PA system on tripod stand (if desired). If you have rented the companion speaker for your event, you will receive a second tripod.
2. If using a companion speaker with the main PA, connect the main PA to companion speaker with the black audio cord provided. Plug one end of the cord into the "speaker out" port of the main PA and the other end into the "speaker in" port of the companion speaker.
3. Power on PA system (rocker switch located at the bottom right hand corner of the system).

NOTE: This system has been fully charged for your one time use. If you prefer uninterrupted power, please bypass the battery by plugging unit directly into your power source (see AC power cord wrapped in a triangular shape on the back of the PA). The power supply status is indicated by a flashing red light above the power switch on the PA. Once fully charged, you can anticipate 5 hours of use on battery supply.

4. Extend antenna located on the top corner of PA for wireless transmission. You can receive transmission from approximately 20 feet away from the PA.
5. Power on microphone. See following for details based on the microphone you have rented.
 - *For wireless handheld units* – power on by sliding button located on the microphone to the PWR position. A green light indicates power and good battery supply. If you should receive a red light indicator, it is time to replace the battery (a replacement battery is located in the leather transport pouch). To access the battery, gently unscrew the bottom section of the microphone and replace with spare 9 volt battery provided. There is a second switch located under the battery supply indicator light of the hand held microphone. This switch will need to be in the "ON" position once you are ready to speak. IF it is in the "mute" position, you will not have sound. This feature is most commonly used when passing the microphone between speakers to eliminate motion sound.

- For wireless lavalier microphones – power button is located directly on the power pack. Spare battery is supplied.
- 6. Adjust volume control. For the wireless volume adjustment, you will find a control located under the tape deck. For the corded microphone, the volume control is located directly above the 3 prong port. Speak directly into the top of the microphone for best sound.

Please power off all items prior to returning the equipment. Microphone should be returned to the leather pouch and the wireless antenna retracted to avoid damage during transportation.