



## Dual PA System

You are receiving this system in advance for your event. We encourage you to read through the operational instructions provided below, familiarize yourself and your staff and perform a test run prior to your event. An operational check was performed by our staff prior to your rental. Please keep unit out of extreme hot or cold. Unit must never be exposed to rain.

1. Mount PA system on tripod stand (if desired). The tripod stand for the PA system has a large open pipe at the top of the stand. This tripod is unique to this system. The bottom of the PA has a port which easily fits over the top of this tripod.
2. If you have rented the companion speaker for your event, you will receive a second tripod. You will notice an insert plug at the top of this tripod which reduces the size of the opening and will only be compatible with the companion speaker. To connect the companion speaker to the main PA, use the black cable provided. Insert one end of the cable into the "speaker out/switch" port of the PA and the other end of the cable will plug into the "speaker/in" port of the companion speaker.
3. Power on the PA system. (Rocker switch located at the bottom right hand corner of the PA system. This system has been fully charged for your one time rental use and will provide up to 5 hours of continuous use on battery power. If you prefer uninterrupted power supply, please bypass the battery by plugging the unit directly into your power source (see AC power cord included wrapped in triangular shape on the back of the PA). For your reference there is a battery power level indicator light located above the power switch on the PA.
4. Power on microphone(s). Each wireless microphone will have its own power switch. See notes below for each microphone you may have rented.
  - Hand held wireless microphone: black is off, green is mute and red is on. You will also see a red light located on the handheld microphone flicker when powering on. This flicker indicates good power supply. If the light should illuminate and remain on, change battery. Spares included.
  - Lavaliere (clip on) microphone: once unit is turned on, if red LED light located on the power pack illuminates and remains on, replace battery. Spares included.
5. This PA system will operate up to (2) wireless microphones at one time. However, the hand held microphone and the lavaliere microphone function on separate channels. Depending on which microphone you have rented, it is important that you follow the channel settings for each microphone in order to

guarantee operation. The lavalier microphone will be preset to channel 1. The hand held microphone will be preset to channel 5.

6. Adjust wireless volume control. The knob is located to the left of the CD player next to the preset channels. There are also volume controls on the system which function for corded microphones. Adjust accordingly to your needs. Speak directly in to the top of the microphone for best sound.
7. A CD player is integrated into this PA. A transport compact disc is inserted into the player to eliminate damage to the internal parts of the PA during transportation. If you have a need to use the player you will first need to remove our disc. Please ensure that transport disc is replaced after your use to avoid damage upon return. Customer will be responsible for damage repair costs to unit returned without disc in place.

Reminder: Prior to your return please power off all units, return microphone(s) to their cardboard boxes, and ensure CD is inserted into player to avoid damage during transportation. If you should experience technical difficulties after reading through the instructions, please contact our office for assistance at 618-277-7750 ext. 2.