



Garden Fountain

1. Place recirculation pump in bottom of large fountain bowl. Pull power cord through bottom and out of the precut hole at base. Do not plug in! You may damage pump by running without water.
2. Insert water pole vertically into pump.
3. Assemble larger column piece to fit over water rod and into large base bowl.
4. Assemble smaller bowl over top column...feed water rod through.
5. Assemble last small column decorative piece at top with water rod extending through top.
6. Fill bottom fountain bowl with clean, clear water only. Plug unit in and in a few minutes water will flow. Do not use plug adapters or remove the ground prong at the end of cord. Call Grand Rental Station if you need assistance at 618-277-7750 ext. 2.

Note: *If you find that there is excessive splashing do the following:*

Turn top round portion of water rod to the left to release pressure. Continue adjusting until desired effect is reached. When the adjustment is open you will find there is less splashing.